



CE FCC QCS

User Manual

General Information

Security

Emergency call

In any country, you can dial 112 (or other emergency call number) for emergency help.

Note:

- Based on the nature of cellular networking, the success of the emergency call cannot be guaranteed.

For your safety

- Switch off the phone in hospitals and aircraft. Obey any restrictions. Wireless devices can affect the medical treatment and cause interference in aircraft.
- Some medical devices such as hearing aids and pacemaker may be sensitive to external radio frequency emissions. Consult the device manufacturers or your doctor before using the phone around the medical devices.
- Pay special attention to the ring tone volume and vibration settings if you have a heart problem.
- In areas with potentially explosive atmosphere, such as gas stations, fuel or chemical transfer or storage facilities, obey all signs and instructions.
- You phone will emit radio frequency even in the standby mode. Turn off your phone when so instructed.
- Always obey all the local laws and regulations. Do not use your phone while driving. Use Hands-free operation, if available, and give full attention to driving and to the road. Pull off the road and park before making or answering a call if driving conditions so require.

- If your phone is lost or stolen, notify your service provider immediately to stop the SIM card from being used.
- When you contact your service provider, they will need your IMEI number. It is printed on the back of your phone set (you can find it when you remove your battery), or call *#06# to look up your IMEI number. Copy this number and save it for future need.
- To prevent your phone from misuse, lock your SIM card or phone, and change passwords when necessary.
- Do not remove the battery without turning off the phone. Failure to follow this instruction may result in data lost.
- When you leave your vehicle, take the phone with you or place it in the glove compartment to avoid theft.
- Keep the phone, battery or charger out of reach of children.

Notices for your phone use

- Do not keep the phone near magcards and other object with magnetism. The phone's magnetism may clear the information stored on floppy disk, pre-paid phone card and credit card.
- Use the phone near land phone, television, radio and office automatic devices may cause interference and affect the function of the mobile phone.
- Keep the phone dry, all kinds of liquid can erode the electronic circuit.
- Keep the phone away from extreme temperatures.
- Keep the phone away from hot places where the temperature may exceed 60°C, such as the dash board, windowsill, near fire or a lighted cigarette.

- Do not paint the phone.
- Do not drop the phone or violently crush or shake the phone.
- Do not disassemble or modify your phone. This can damage the phone, cause leakage and break the internal circuit.
- Use only damp cloth or non-static cloth to clean your phone. Do not use alcohol, thinner, benzene or other chemicals or abrasive cleaner to clean your phone.
- The phone will become warm under normal use and while in battery charging.
- Do not leave the phone with battery uninstalled or with the battery empty for a long period of time. This may cause data loss.
- The metal parts of the phone may irritate your skin depending on your health condition.
- Do not put the phone in the back pocket. Sitting on it may damage the phone. Do not put the phone on the bottom of a bag. You may crush it.
- When the vibrate mode is on, place the phone carefully to avoid it being dropped from a height or being moved to a heat source due to the vibrating.
- Use only the stylus approved by the phone manufacturer. Do not press the touch screen with needles, pen point or other sharp objects, otherwise it can damage the LCD and violate the terms of the warranty.
- Handle the stylus with care. Place it back to its proper storing place when not in use. Keep it away from children.

1. FUNCTION MENU

1.1. File manager

Enter the File manager menu; Press the "option" to carry out the following operation:

- Open** To display the files in the root.
- Format** To format the Flash Card and delete the data stored.

1.2. Phone Book

You can use the phonebook function to save name card information such as names, groups, telephone numbers, personalized ring tones. All you need to do is to press the right soft key, "Names", directly enter the phonebook function.

1.3. Fun&Games

Please refer the game help.

1.4. Extra

1.4.1. Calculator

Your mobile phone provides a calculator with 4 basic functions to facilitate simple calculations.

Enter the "Calculator" submenu to display the operation interface of the calculator:

- Use the **Number keys** from 0 to 9 to enter the numbers you wish to enter.
- Press the **right soft key**, you can delete the latest entry or result, press the **right soft key**, "BACK", to exit the calculator, press the **left soft key**, "ok" to calculate the result.

1.4.2. Ebook Reader

Support View UCS2, UTF8, GB2312, English text encoding four documents.

Entering E-book reader, press left key "option", can show the option menu, including the following

- Open E-Book** Access e-books, in the options menu, can Find, Jump To, Go to Bookmark, Add bookmark, Remove Bookmark, Book Info, Settings, Apply Global Settings, Help and Close.
- Update**(Clean Up Bookshelf) Refresh e-books
- Global Settings**
- Book Info** Show the text's name, size and text format information
- Delete** Delete this text.
- Delete all Files** Delete all the text in this path
- Sort by** Choose name, type, time, size and none to sort.
- Apply Global Settings** Carry out the system default.
- Help** View the setting of keyboard quick function.

1.4.3. Bluetooth

In the Bluetooth submenu, the following options for you to carry out the relative setting of the Bluetooth service:

- Power** Press the left soft key to on/off the Bluetooth function.
- Inquiry Audio device** Press the left soft key to search the Bluetooth earphone. If there are some active BT earphone nearby, the handset will find the apparatus. Press the left soft key to "connect", after inputting the relative code (normally the default earphone code is:0000, the details please check the user manual of BT earphone), you can connect the handset with the apparatus successfully and make a call with BT

earphone.

- My device** Press the left soft key "OK" to enter the "my device" submenu, the display will show the apparatus which have been connected with the handset. Select one apparatus and press the left soft key "Options" to carry out the following operations:

- Connect** To connect the apparatus with handset and you can also connect the service of service recorder.
- Disconnect** To disconnect the connecting apparatus.
- Rename** To rename the apparatus.
- Delete** To delete the current record.
- Delete All** To delete all records.
- Service list** To show the service record of current apparatus.
- Inquiry new device** To search new Bluetooth apparatus.

Settings

- Visibility** Press the left soft key to on/off this function.
- Change Device Name** You can rename the handset in Bluetooth connection.
- Authentication** Press the left soft key to on/off this function. When you set it on, it allows others Bluetooth apparatus connect the device.
- Audio Path** To select the audio path from "Leave in Phone" and "Forward to BT headset".
- FTP settings** Press the left soft key "OK" to enter the submenu: "Share Folder". Memory card or

Handset/File Manager/folder. "Access right": freely save & read or read only.

- About** To show the name of Bluetooth apparatus, Bluetooth apparatus add and supported service.

Files transmission: The sender and receiver's BT is active (the apparatus settings should be visible). When you open the selected file, and select options/transmit/forward to BT, then input the connected code to transmit. (the default connecting code is 0000).

Playing Music: When you active the music player and connect the handset with BT earphone. In **my apparatus** submenu, please select the **Connect** to forward the music player service to the BT earphone and make sure the connection between handset and BT earphone is properly. Then you can listen to the music from the BT earphone. If you want listen to the music from the handset, in **my apparatus** submenu, please select the **Disconnect** to disconnect the music player remote control service.

1.5. Call Center

1.5.1. Call History

You can view info related to call records, including: Missed Calls, Dialed Calls, Received Calls, Delete Call Log, Call Time, Call Cost, SMS Counter, GPRS Counter.

1.5.2. Call Settings

For a general setting, such as:SIM1, SIM2 call setting(including Call ID, Call waiting, Call divert, Call barring),Auto redial, IP Dial, Call time display, Call time reminder, Auto quick end.

1.6. Messaging

1.6.1. Writing messages

SMS: Enter the SMS editor screen. You may input English, digits and punctuation marks.

1.6.2. Inbox

The new incoming messages including the SMS and MMS are saved in the "Inbox" folder.

1.6.3. Drafts

After edited, the MMS that are not ready to send out and is saved in this folder.

1.6.4. Outbox

Enter the "Outbox" submenu. Press [OK] to read the message.

1.6.5. MMS

■ **Write message** create a MMS message and the options are as follow: **receiver, CC, BCC, subject, content.**

■ **Inbox** New received MMS is saved in the "Inbox" folder.

■ **Outbox** Unsuccessfully sent MMS are saved in the "Outbox" folder.

■ **Drafts** after edited, the MMS that are not ready to send out and is saved in this folder.

■ **Templates** Enter the MMS list, you can edit or delete the default template.

■ **MMS settings** You must make the necessary settings before you use the MMS functions.

1.6.6. Broadcast Message

■ **Receive mode** You can select "on" to enter receive mode, select "off" to reject receive broadcast messages

■ **Read message** read the received Broadcast

9

Note: GPRS service the support from the network provider Only in the area of the network covering, you can use the GPRS service.

1.8.3. Data account

■ GSM data

In this menu, you can set and edit the data account items as following:

➢ **Account name** To edit the name of the Data Account.

➢ **Number** The dial connecting number of the current data account.

➢ **User name** Default is wap.

➢ **Password** Default is wap.

➢ **Line Type** To select the type of data between Analogue and ISDN.

➢ **Speed** To select the rate of WAP data transmission among 4.8Kbps, 9.6Kbps, 14.4 Kbps

➢ **DNS** Address of DNS in WAP.

■ GPRS

This menu display the current WAP GPRS data account list, you can set and edit the data account items as following:

➢ **Account Name:** To edit the name of the data account.

APN: Default is "blank".

➢ **User name:** The ID of APN server, default value is null.

➢ **Password:** The key to APN Server, default

13

messages.

■ **Languages** change the language

■ **Channel setting** set the channel of broadcast messages.

1.6.7. Templates

Enter the message list, you can edit or delete the default template.

1.6.8. SMS Settings

Enter the "Message setting" submenu;

■ **Profile setting** To select a suitable profile for the messages, after entering the relative profile, you can set the relative options such as: name, number of message center, available time and message style.

■ **Common setting** To set **delivery report /reply path/Save sent message** On or Off.

■ **Memory status** To check the status of the SIM card and phone message inbox.

■ **Preferred storage** Two places to storage: phone or SIM card.

1.7. Multimedia

1.7.1. Camera

This mobile phone is equipped with a high resolution camera which you can use to take pictures at anytime or place and then save them on your mobile phone. During the view-finding mode, press the "Option", to carry out the following operations:

■ **Photos** To display the file list.

■ **Camera Settings** To adjust **EV, Anti-flicker, Delay Timer** settings. Select [OK] to activate

10

value is null.

➢ **Auth. Type:** T To select from the two items of Normal & Secure to authorize your ID in WAP by pressing the left/right key.

DNS: Address of DNS in WAP.

1.9. Organizer

The handset supplies some organizer functions such as: Calendar, To Do List, Alarm, World Clock, Stopwatch, etc.

1.10. Settings

1.10.1. Dual SIM Settings

■ **Dual SIM open** SIM1 and SIM2 are all power on.

■ **Only SIM1 open** SIM1 is power on but SIM2 is power off.

■ **Only SIM2 open** SIM1 is power off, but SIM2 is power on.

■ **Flight mode** SIM1 and SIM2 are all power off.

1.10.2. Phone settings

■ **Time and Date** Including default city time zone setting, time setting and time format setting.

■ **Schedule Power ON/OFF** There are four different

times to set for the phone to auto power on/off according to the setting type.

■ **Language** You can set a desired language to be displayed on your phone.

■ **Display** Here you can set: Wallpaper, Screensaver, power on/off Display, Show Date and Time.

■ **Misc setting** Set the LCD backlight brightness

the settings.

■ **Image settings** Including **Image size** and **Image quality** adjustment.

■ **White balance** To set the balance of light.

■ **Scene Mode** To set the profile as **auto** or **night mode**.

Restore Default Press [OK] and select **Yes** to return to default settings.

1.7.2. Image Viewer

Enter the "Image viewer" submenu.

1.7.3. Video recorder

During the view-finding mode, adjust the lens to allow what is being photographed to appear in the viewfinder. Press the red button to activate the video recorder.

Press the "Options", you can perform the following operations:

- **Camcorder setting:** To set some spec of the video recorder.

- **Video setting:** Includes **Video quality, Record audio** adjustment.

- **Storage:** Phone memory or T-flash card memory.

- **Restore Default:** Press [OK] and select **Yes** to return to default settings.

1.7.4. Video player

Select "Video player" submenu to view the short film list stored in the move player, press the **left soft key** to perform the **Play, Send, Rename, Delete, Delete All** operation, "Sort By" operation on the list and view the file storage position.

Tip: The default folder name for video player is Video in the handset memory and t-flash card.

11

1.7.5. Audio player

Enter the "Audio player" submenu to open the MP3 player.

1.7.6. Sound recorder

In this submenu, you can record the sound, press the "option" to carry out the following options:

● **Record** To record one new sound.

● **Play** To play the selected record.

● **Append** To append new record to the selected file

● **Rename** Edit the name of current sound record file.

● **Delete** Delete the selected file.

● **Delete All** Delete all files of the list.

● **Settings** Set the File format

Forward To forward the selected sound recorder to User Profile and SMS.

1.7.7. FM Radio

This FM Radio one also features a radio. You can search radio programs or to do it manually.

1.8. Services

1.8.1. STK

STK is the value added service supplied by the service provider. Your phone support STK function, you need support of your network operator For more information, please contact the network operator.

1.8.2. Internet service

Your mobile phone supports wireless application protocol (WAP) service. You can access many different WAP services such as news, weather reports, flight information and so on. These services are especially designed for mobile phones and maintained by WAP service providers.

12

and time.

1.10.3. Network Settings

■ **Network Selection** The Network Selection feature enables you to: select a network automatic or manually.

■ **Preferences** Support selection preferred networks.

1.10.4. Security Settings

■ Security settings

You can set Phone lock, SIM lock, and Auto keypad lock here.

PIN code: Change PIN1 and PIN2 passwords. You need to have the default Pin numbers from the network carrier.

Phone lock: Turn the phone lock on/off and edit your phone password. The default is 0000.

SIM lock: Allow you to check the SIM card lock status and change password.

Auto keypad lock: You can lock your phone manually, or select auto lock for the phone to lock its screen and keypad automatically after some idle time in the Standby mode.

To lock/unlock your phone, press **# + OK**.

1.10.5. Restore Factory Setting

The default value of Restore Factory Setting is:0000.

1.11. User Profile

Your mobile phone provides many different profiles for you to set your mobile phone's ring tone, according to case and environments.

■ General

➢ **Activate** To activate the General profile.

15

➢ **Customize** To modify the setting options of the General profiles such as: **Ring tone, Volume, Alert Type, Ring Type, Extra Tone, Answer Mode.**

■ Meeting

The operations is the same as the **General** option.

■ Outdoor

The operations is the same as the **General** option.

■ Indoor

The operations is the same as the **General** option.

■ Headset

You can activate this mode when you insert one headset.

The operation of this menu is the same as the **General** option.

■ Bluetooth

The operation will activate the BT earphone and activate the handset BT.

1.12. Shortcuts

In the submenu, you can select the relative function and menu speedy.

■ Add new contact

■ Search contact

■ SIM1 owner number

■ Tone settings

■ Volume

■ Alarm

16